



(en) Schematic Manual
MAXI-POWER™ 15XR

TABLE OF CONTENTS

Tail Light and Electric Brake Harness Schematic (114032)	(1.1)
4/4 50/60Hz 11/15kW Generator Cord Schematic (115225)	(1.2)
CAT C1.5T Engine Harness Schematic (106553)	(1.3)
MP 15XR Deep Sea Control Harness Schematic (118347)	(1.4)
Low Fuel Sender Schematic (110089)	(1.5)
LSC or SLS Heated Fuel/Water Separator Schematic (105886)	(1.6)
Single Battery Charger Schematic (120199)	(1.7)
2-GFCI, 2-30A Twistlock, 2-50A Twistlock 15kW Outlet Schematic (118325)	(1.8)
2-GFCI, 2-30A Twistlock, 2-50A RV 15kW Outlet Schematic (118326)	(1.9)
2-GFCI, 2-30A RV, 2-50A RV 15/20kW Outlet Schematic (117461)	(1.10)
Distribution Blocks to Power Lugs 4/4 Cord Schematic (124988)	(1.11)
2-GFCI, 2-30A RV, 1-50A RV, 1-50A Twistlock 15kW Outlet Schematic (126439)	(1.12)
Shocker Valve Harness Schematic (106156)	(1.13)
Curt Break Away Kit Maxi-Power 15XR Schematic (126666)	(1.14)

MAXI-POWER™ 15XR

WIRE SCHEMATIC PAGE CONNECTION TABLE

Schematic Page	1st Connection Page(s)	2nd Connection Page(s)	3rd Connection Page(s)	4th Connection Page(s)
Tail Light and Electric Brake Harness Schematic (1.1)	n/a	n/a	n/a	n/a
4/4 50/60Hz 11/15kW Generator Cord Schematic (1.2)	(1.4-5th)	(1.8-1st), (1.9-1st), (1.10-1st), (1.11-1st), or (1.12-1st)	(1.8-2nd), (1.9-2nd), (1.10-2nd), (1.11-2nd), or (1.12-2nd)	n/a
CAT C1.5T Engine Harness Schematic (1.3)	(1.4-1st)	(1.4-2nd)	(1.4-3rd)	(1.4-4th)
MP 15XR Deep Sea Control Harness Schematic (1.4)	(1.3-1st)	(1.3-2nd)	(1.3-3rd)	(1.3-4th)

Schematic Page	5th Connection Page(s)	6th Connection Page(s)	7th Connection Page(s)	8th Connection Page(s)
CAT C1.5T Engine Harness Schematic (1.3)	(1.4-6th)	(1.5-1st)	n/a	n/a
MP 15XR Deep Sea Control Harness Schematic (1.4)	(1.2-1st)	(1.3-5th)	(1.6-1st)	(1.6-2nd)


Schematic Page	1st Connection Page(s)	2nd Connection Page(s)	3rd Connection Page(s)	4th Connection Page(s)
Low Fuel Sender Schematic (1.5)	(1.3-6th)	n/a	n/a	n/a
LSC or SLS Heated Fuel/Water Separator Schematic (1.6)	(1.4-7th)	(1.4-8th)	n/a	n/a

WIRE SCHEMATIC PAGE CONNECTION TABLE

Schematic Page	1st Connection Page(s)	2nd Connection Page(s)	3rd Connection Page(s)	4th Connection Page(s)
Single Battery Charger Schematic (1.7)	n/a	n/a	n/a	n/a
2-GFCI, 2-30A Twistlock, 2-50A Twistlock 15kW Outlet Schematic (1.8)	(1.2-2nd)	(1.2-3rd)	n/a	n/a
2-GFCI, 2-30A Twistlock, 2-50A RV 15kW Outlet Schematic (1.9)	(1.2-2nd)	(1.2-3rd)	n/a	n/a
2-GFCI, 2-30A RV, 2-50A RV 15/20kW Outlet Schematic (1.10)	(1.2-2nd)	(1.2-3rd)	n/a	n/a
Distribution Blocks to Power Lugs 4/4 Cord Schematic (1.11)	(1.2-2nd)	(1.2-3rd)	n/a	n/a
2-GFCI, 2-30A RV, 1-50A RV, 1-50A Twistlock 15kW Outlet Schematic (1.12)	(1.2-2nd)	(1.2-3rd)	n/a	n/a
Shocker Valve Harness Schematic (1.13)	n/a	n/a	n/a	n/a
Curt Break Away Kit Maxi-Power 15XR Schematic (1.14)	n/a	n/a	n/a	n/a

MAXI-POWER™ 15XR


1.1 - Tail Light and Electric Brake Harness Schematic

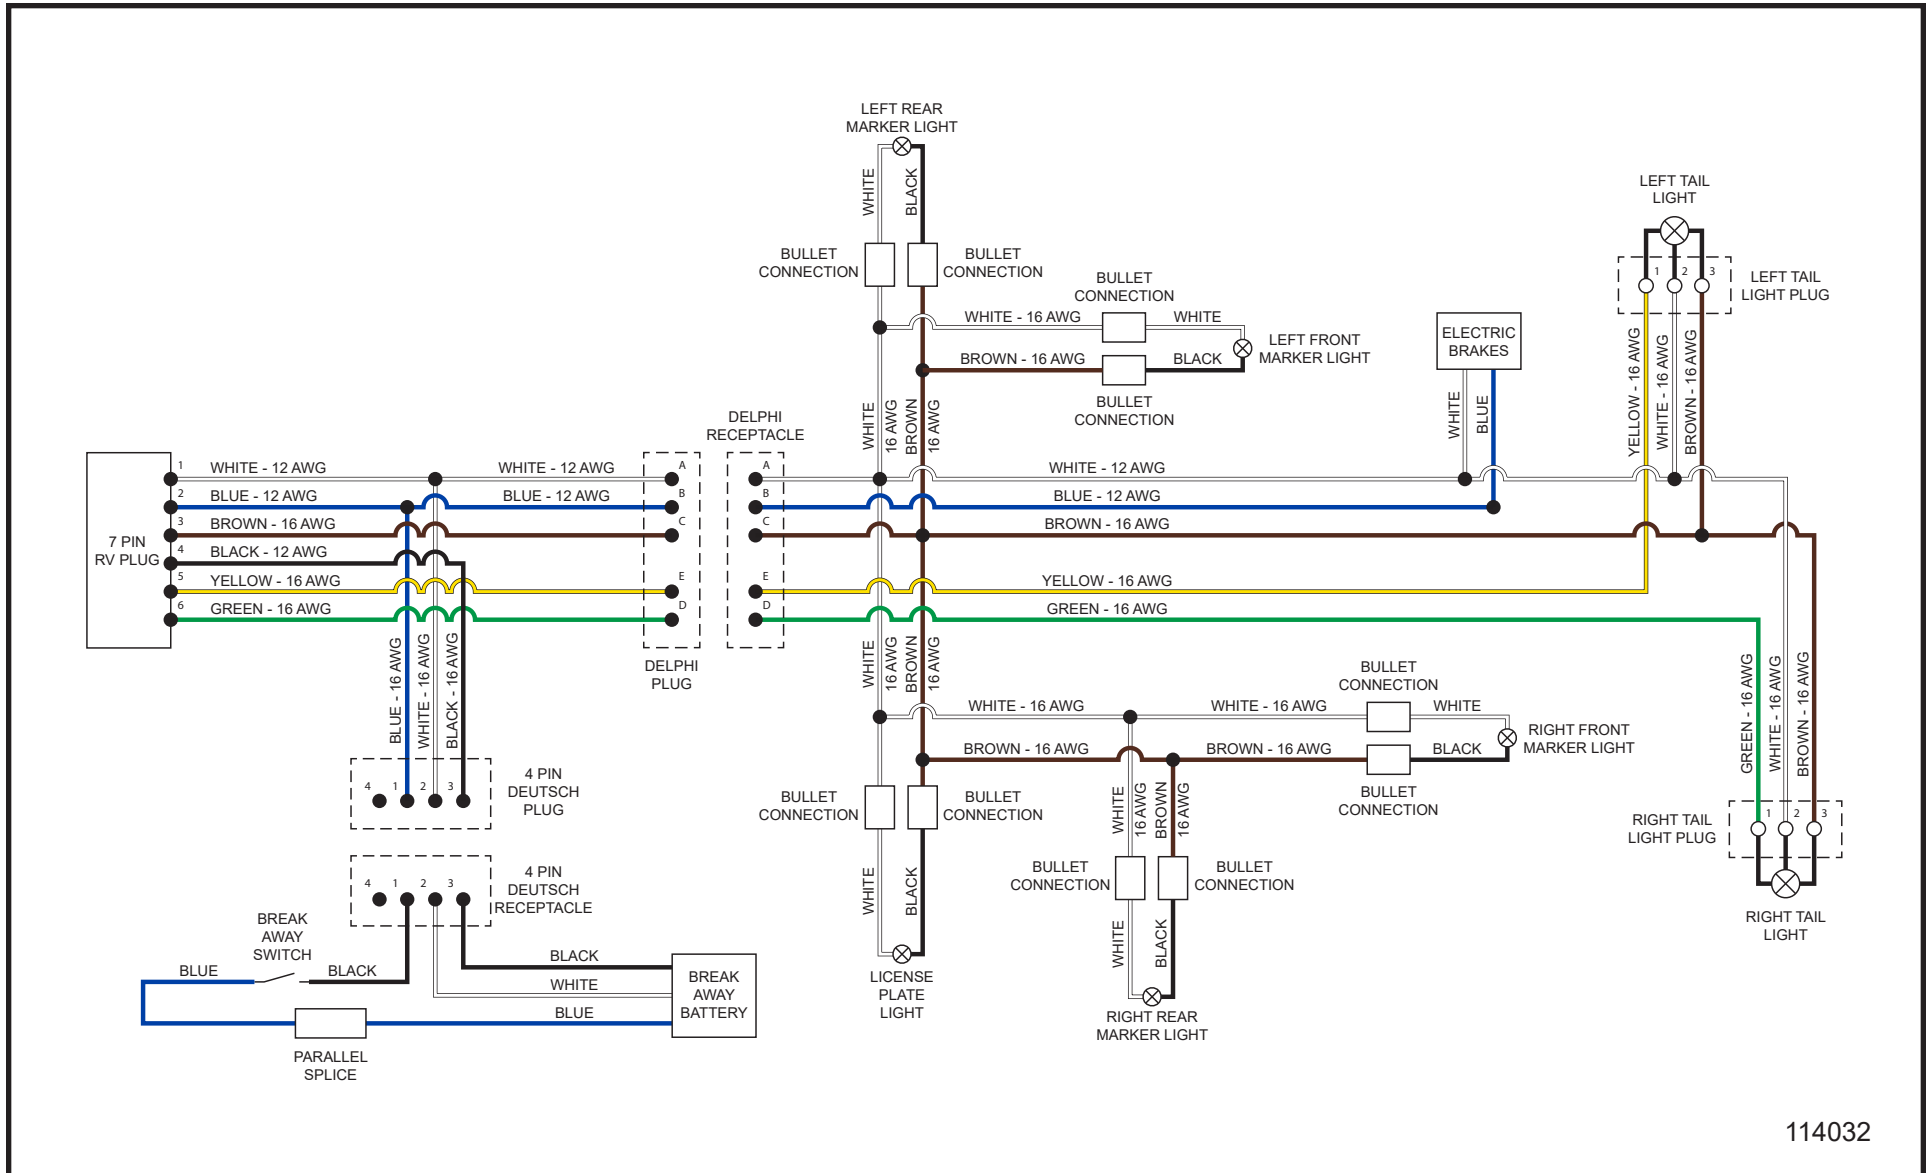


114032

MAXI-POWER™ 15XR

1.2 - 4/4 50/60Hz 11/15kW Generator Cord Schematic

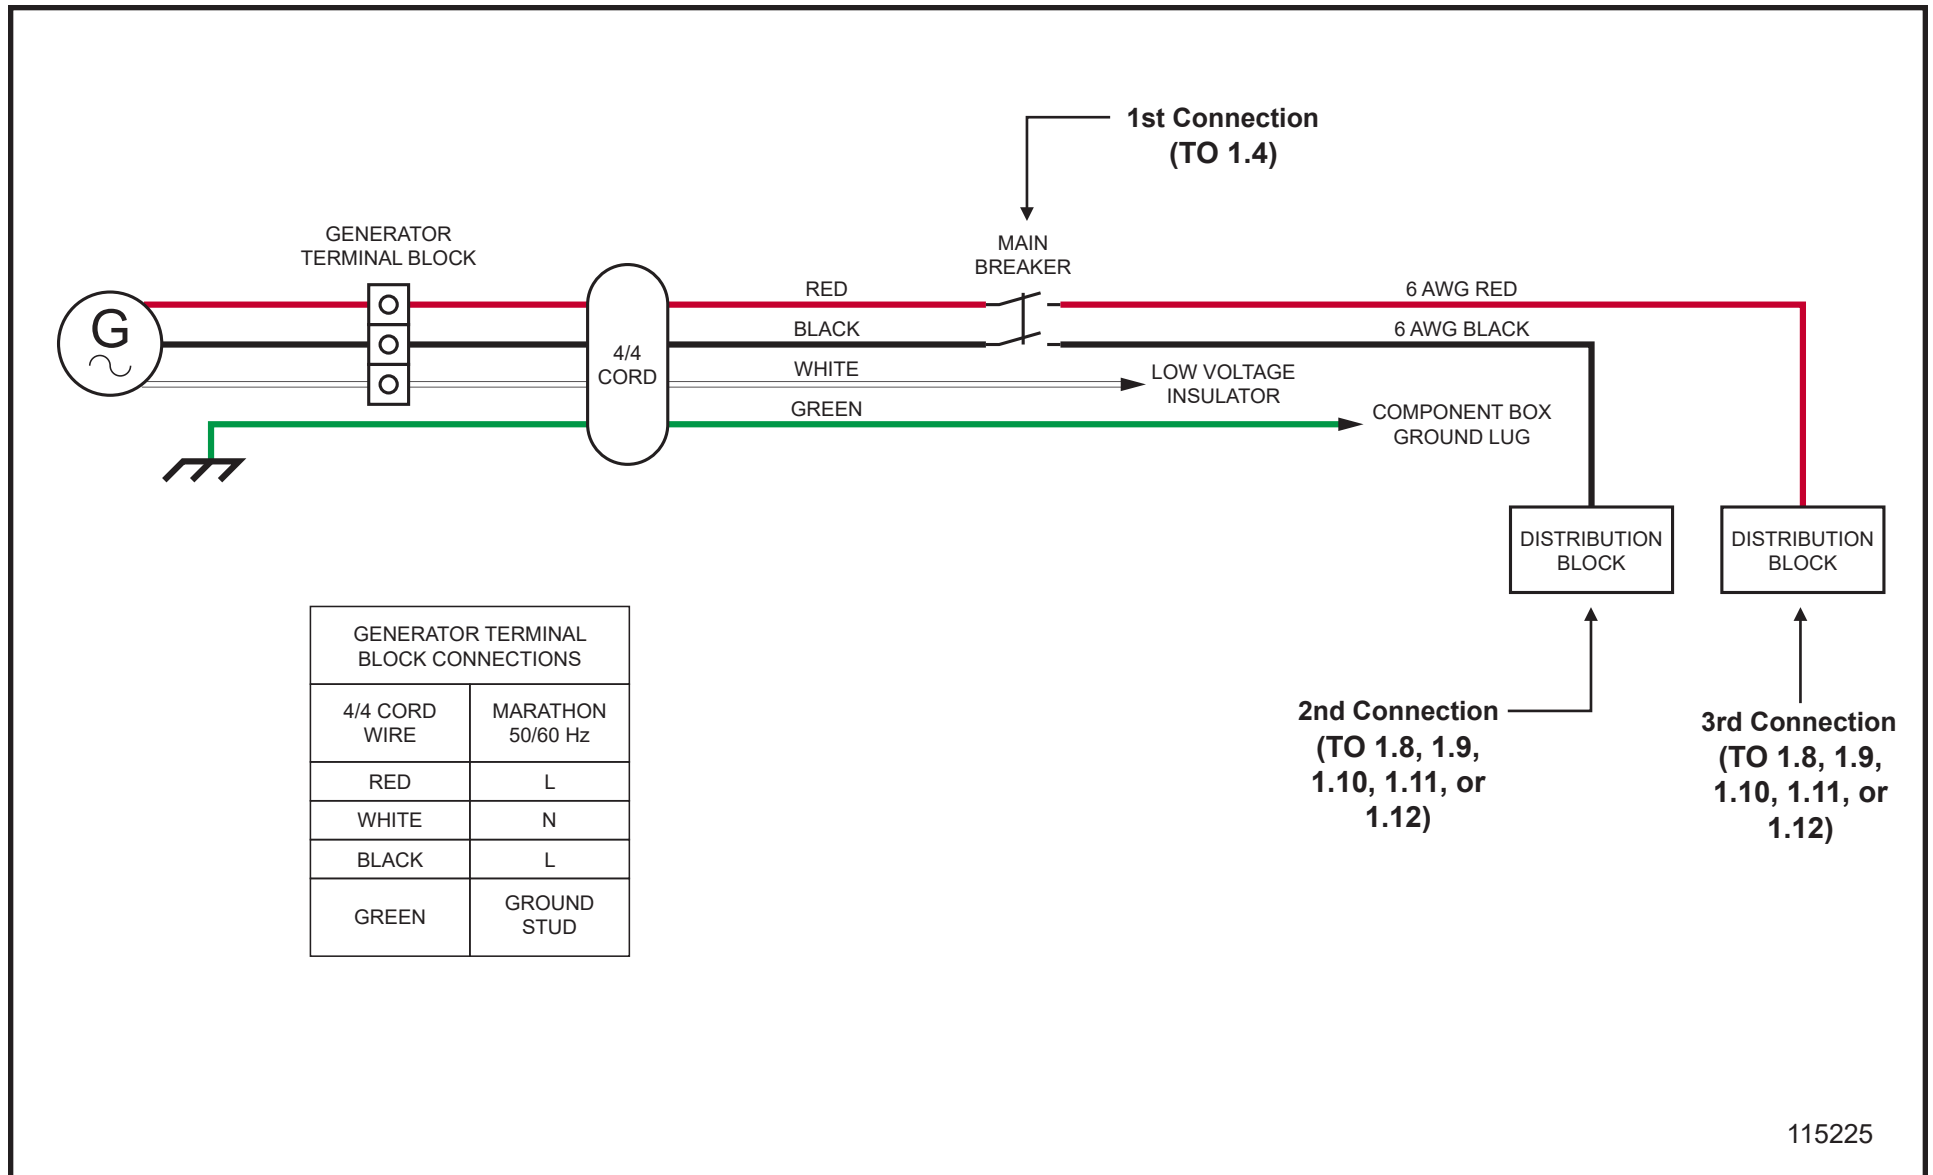


1.3 - CAT C1.5T Engine Harness Schematic

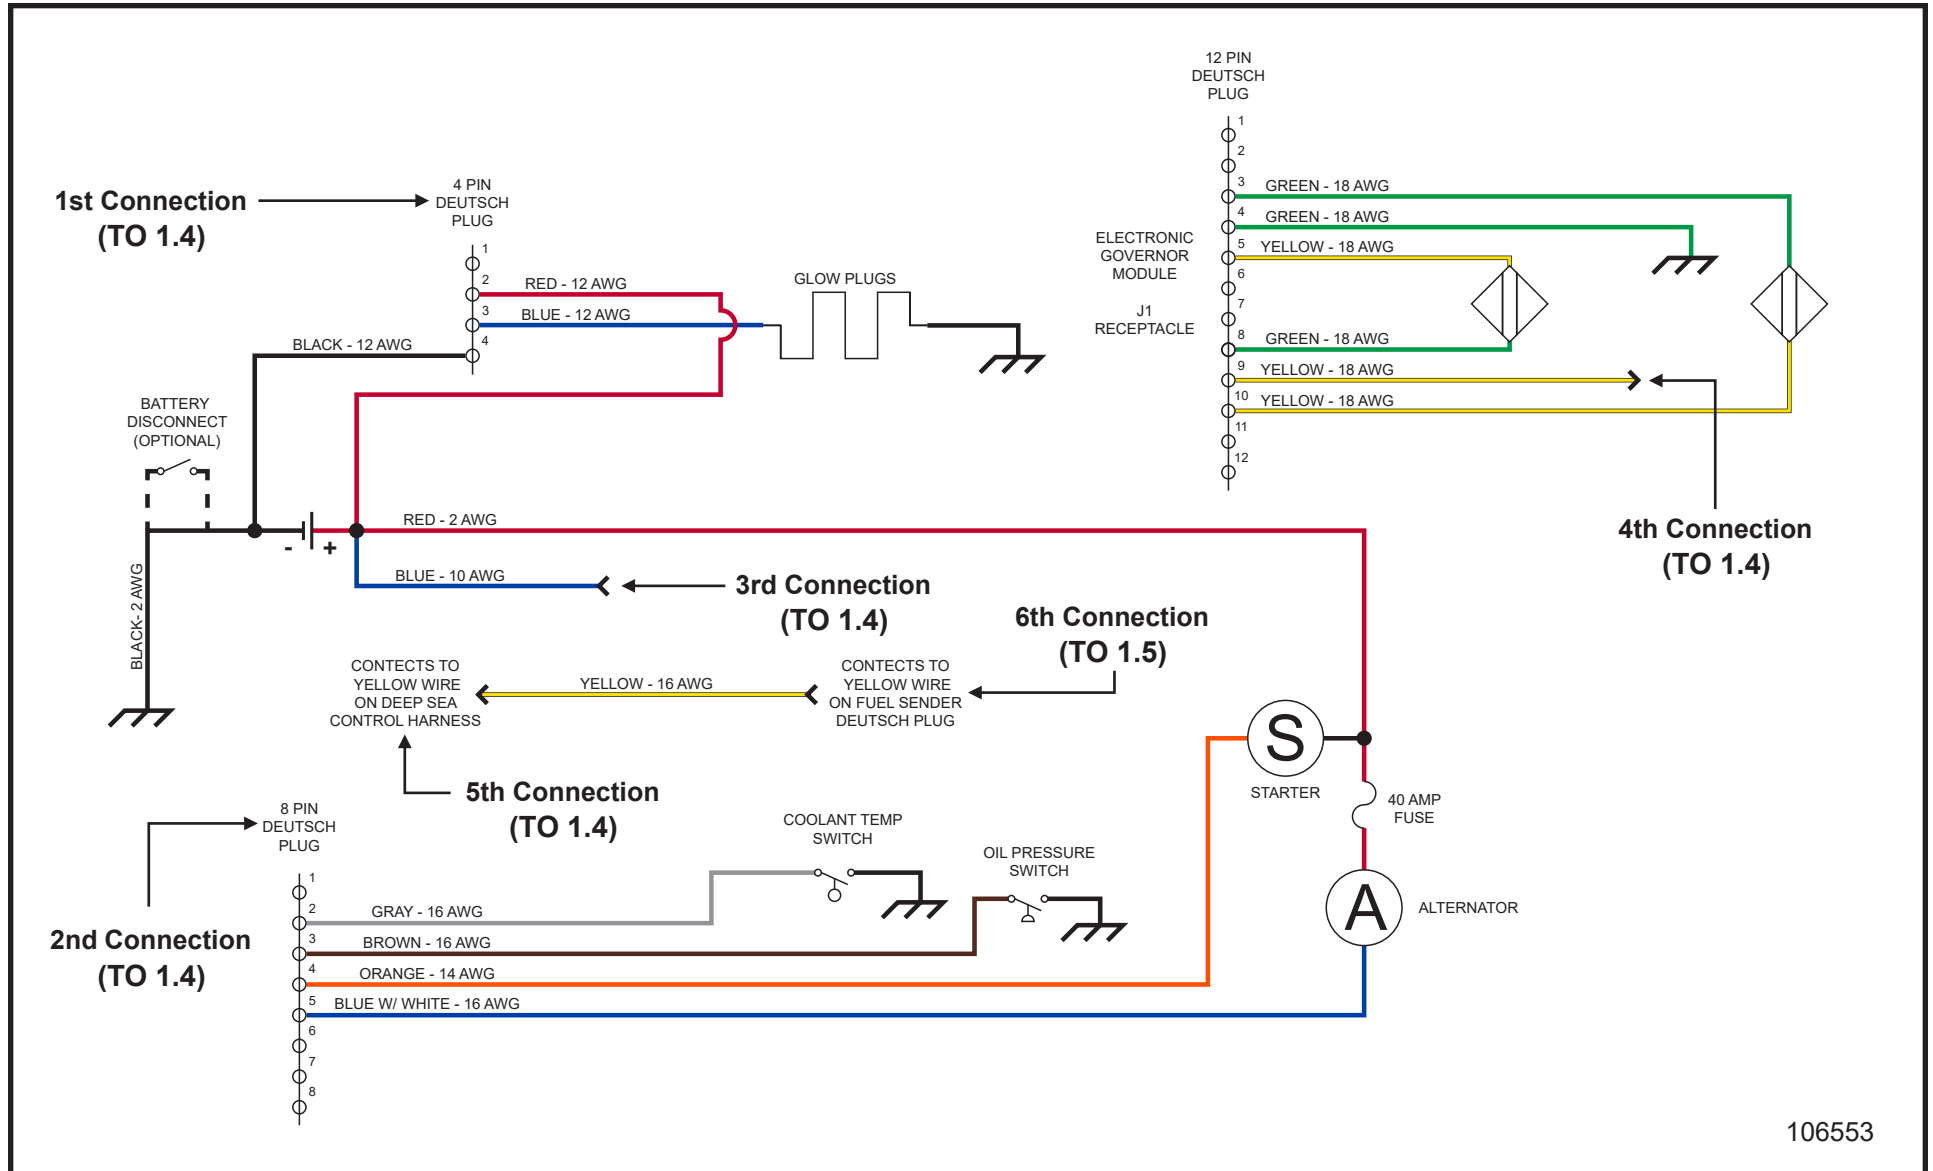


106553

MAXI-POWER™ 15XR

1.4 - MP 15XR Deep Sea Control Harness Schematic

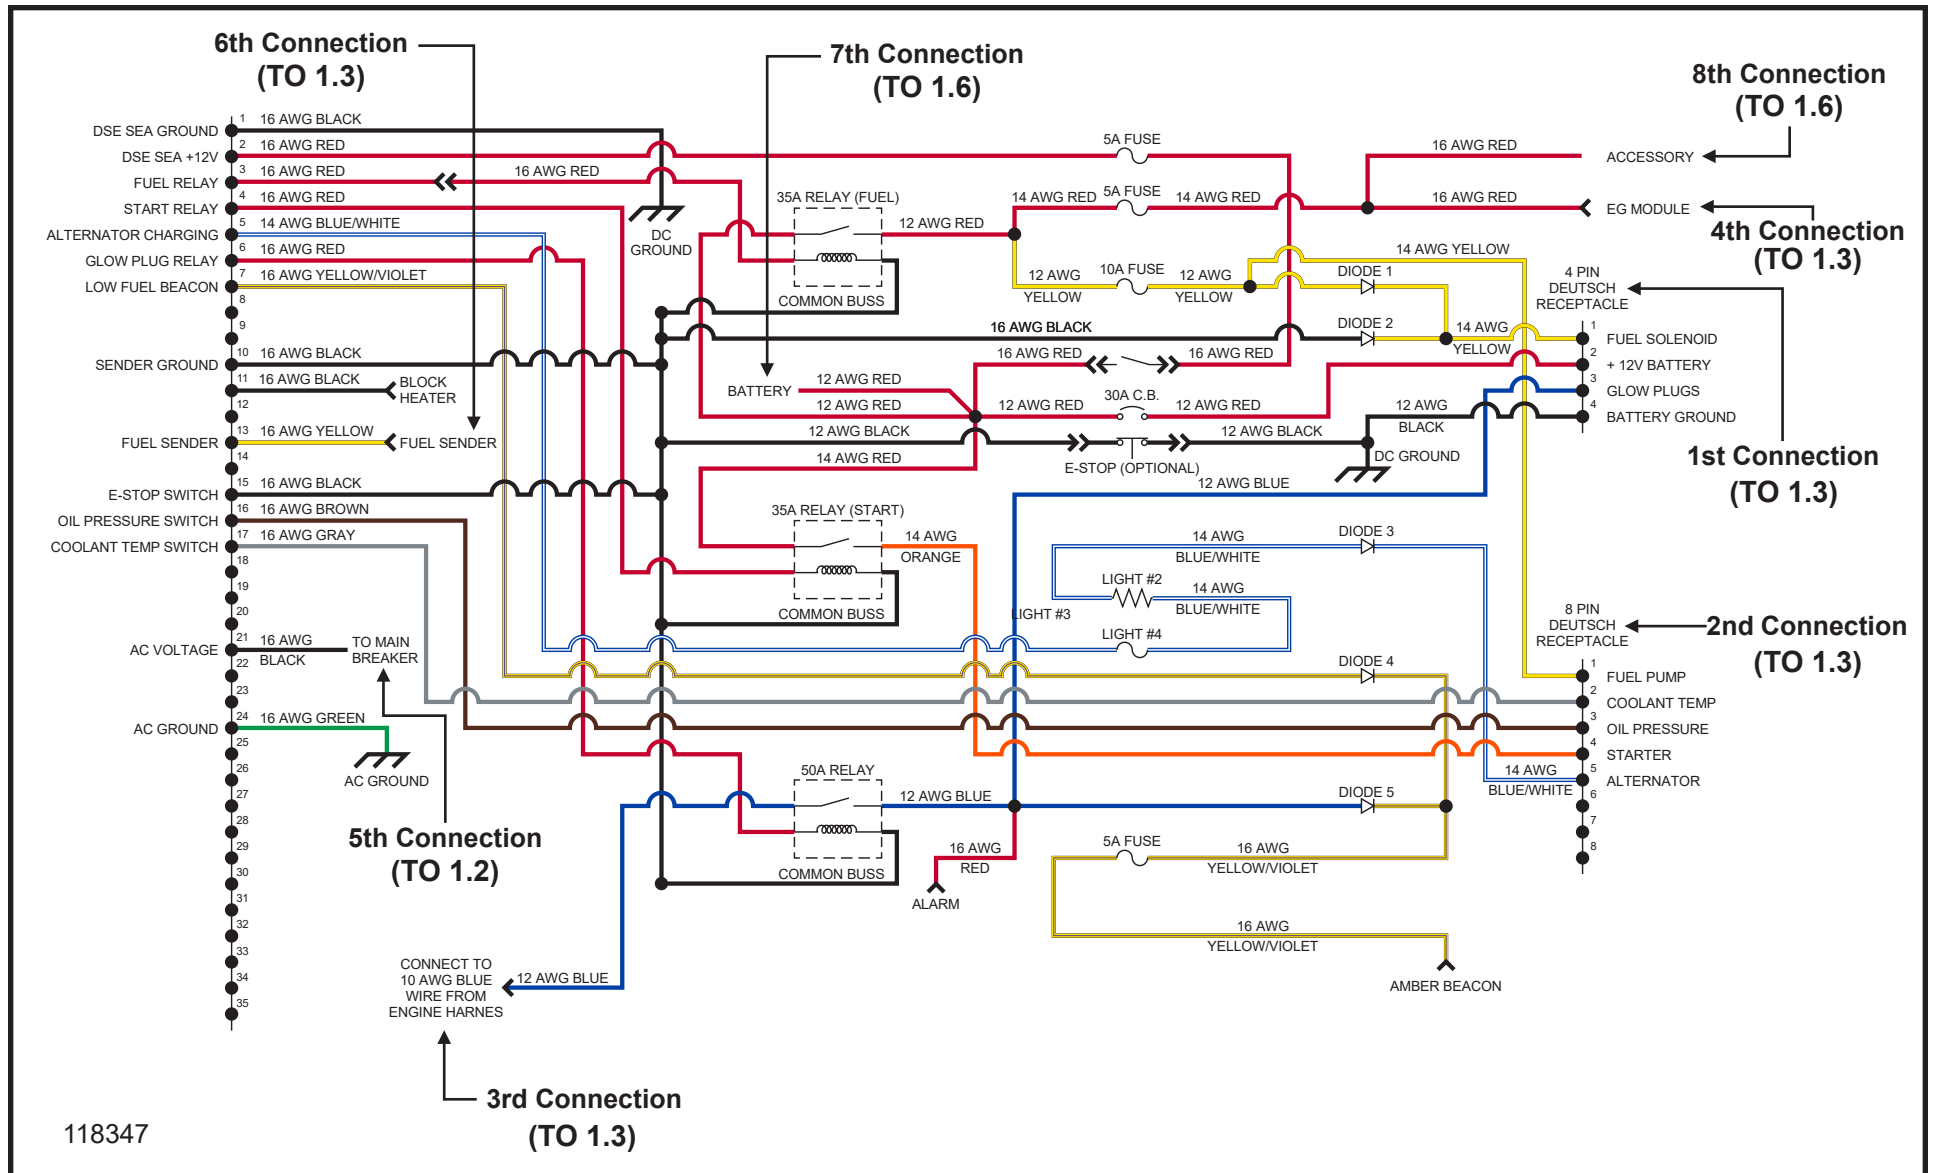


1.5 - Low Fuel Sender Schematic

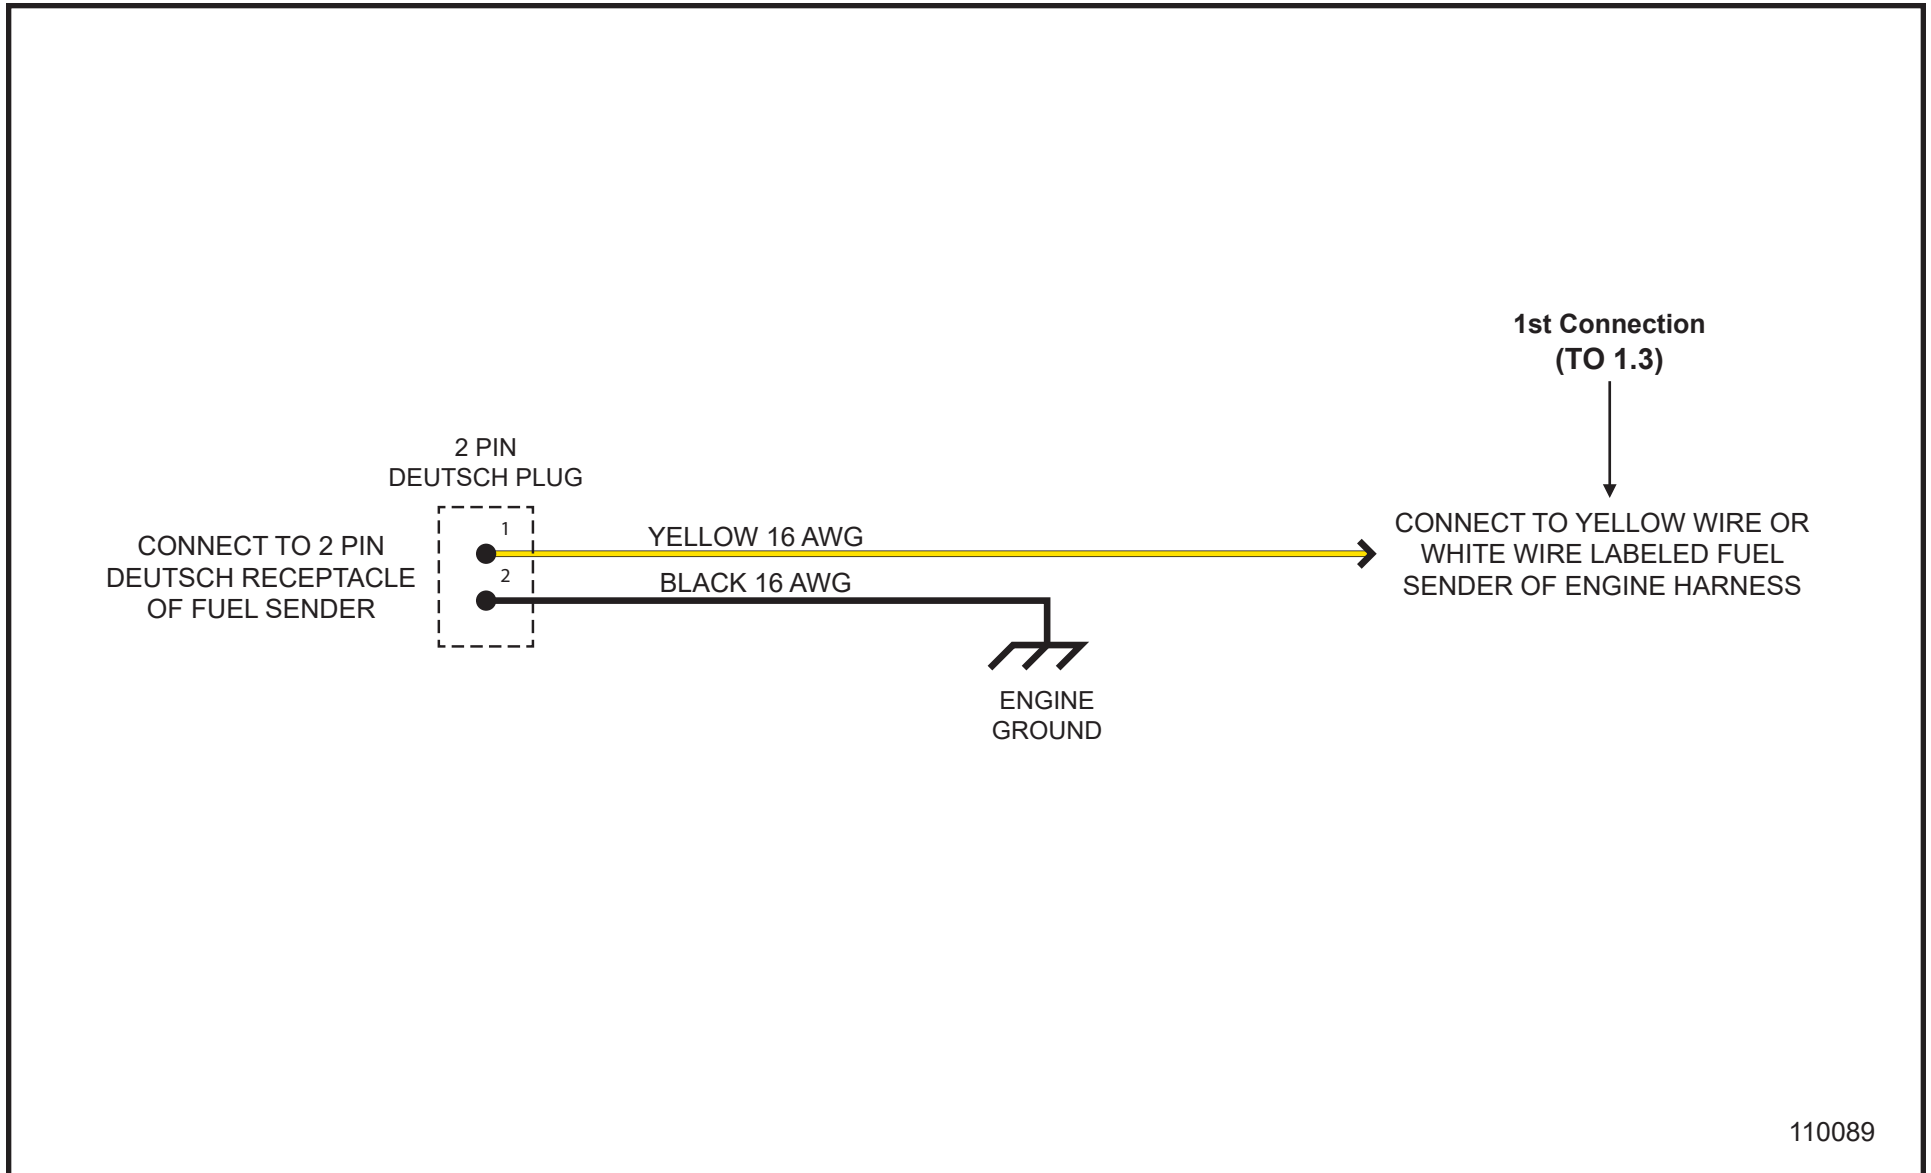


110089

MAXI-POWER™ 15XR

1.6 - LSC or SLS Heated Fuel/Water Separator Schematic

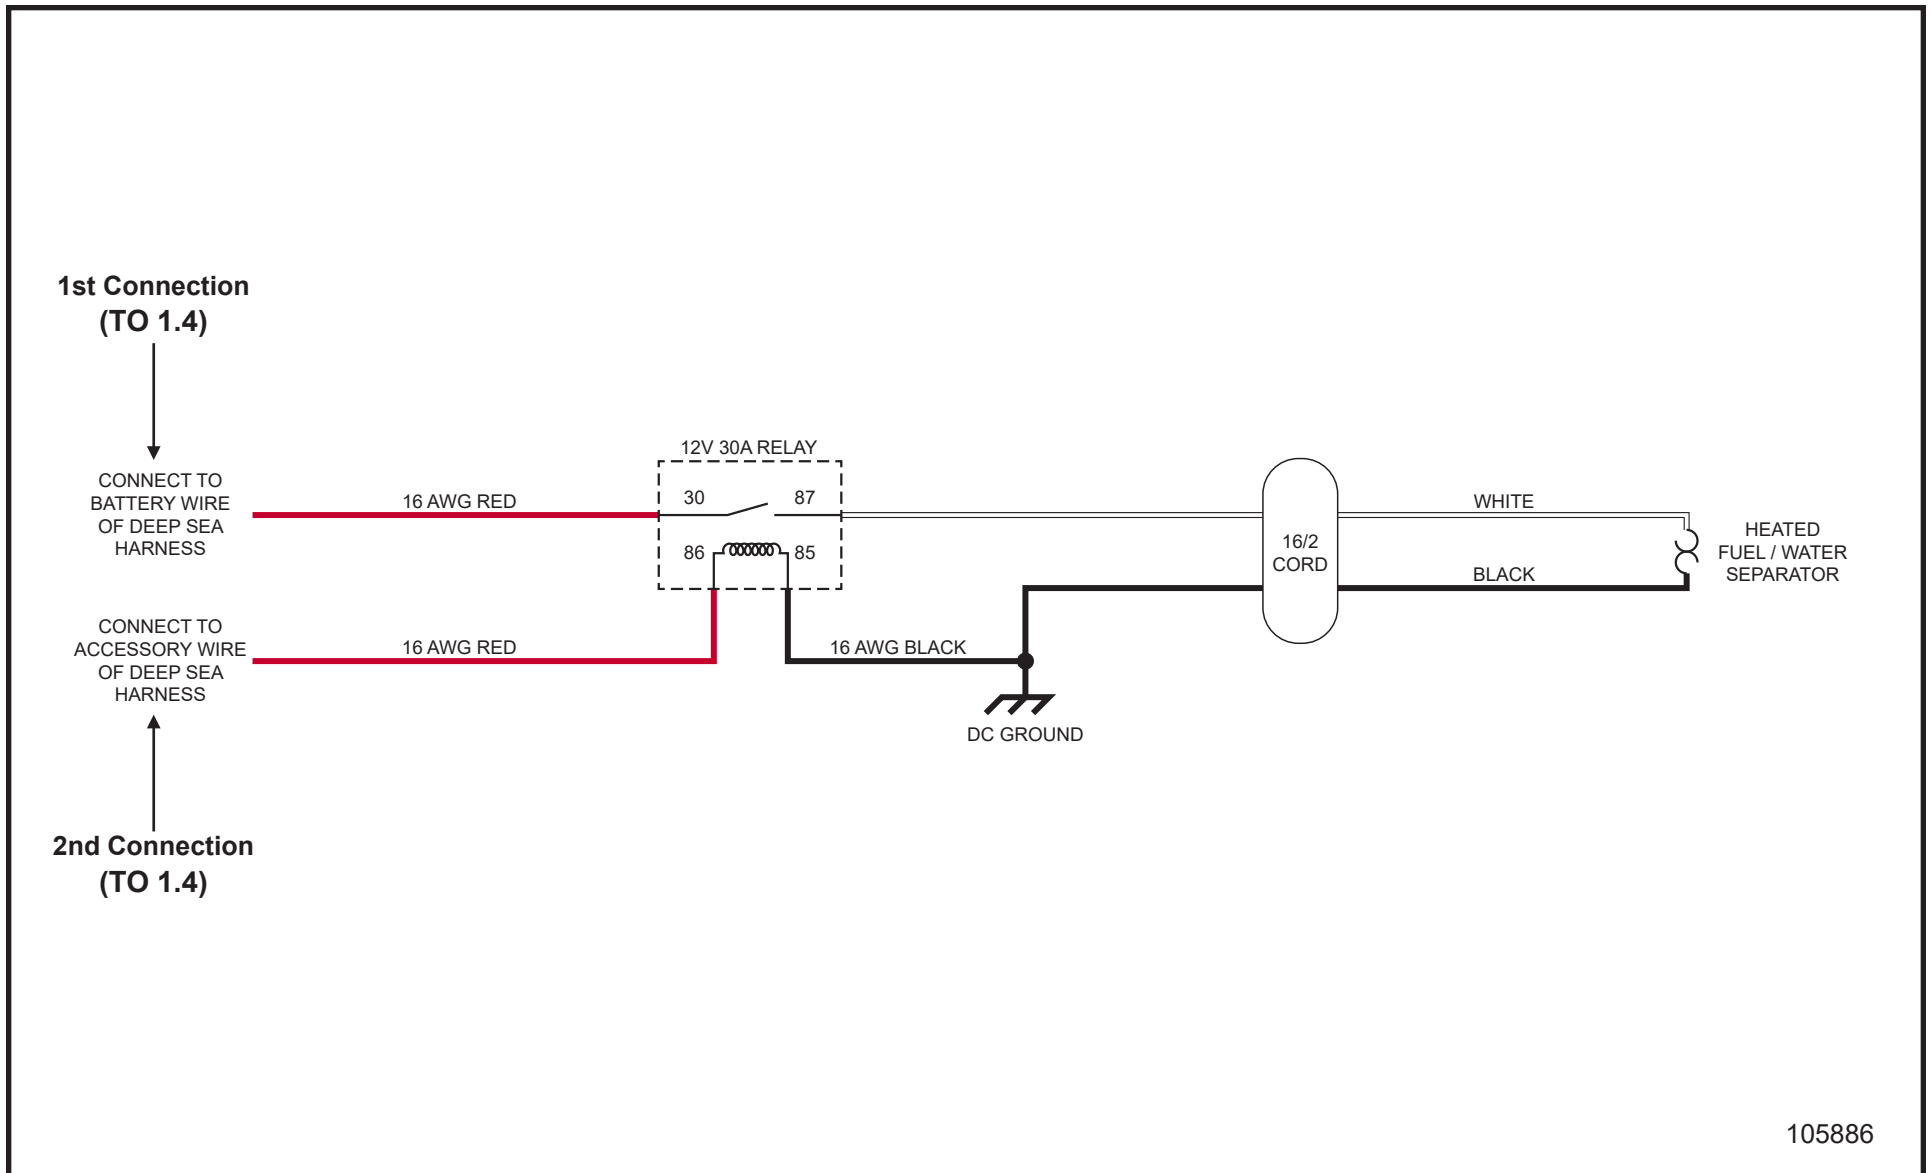


1.7 - Single Battery Charger Schematic

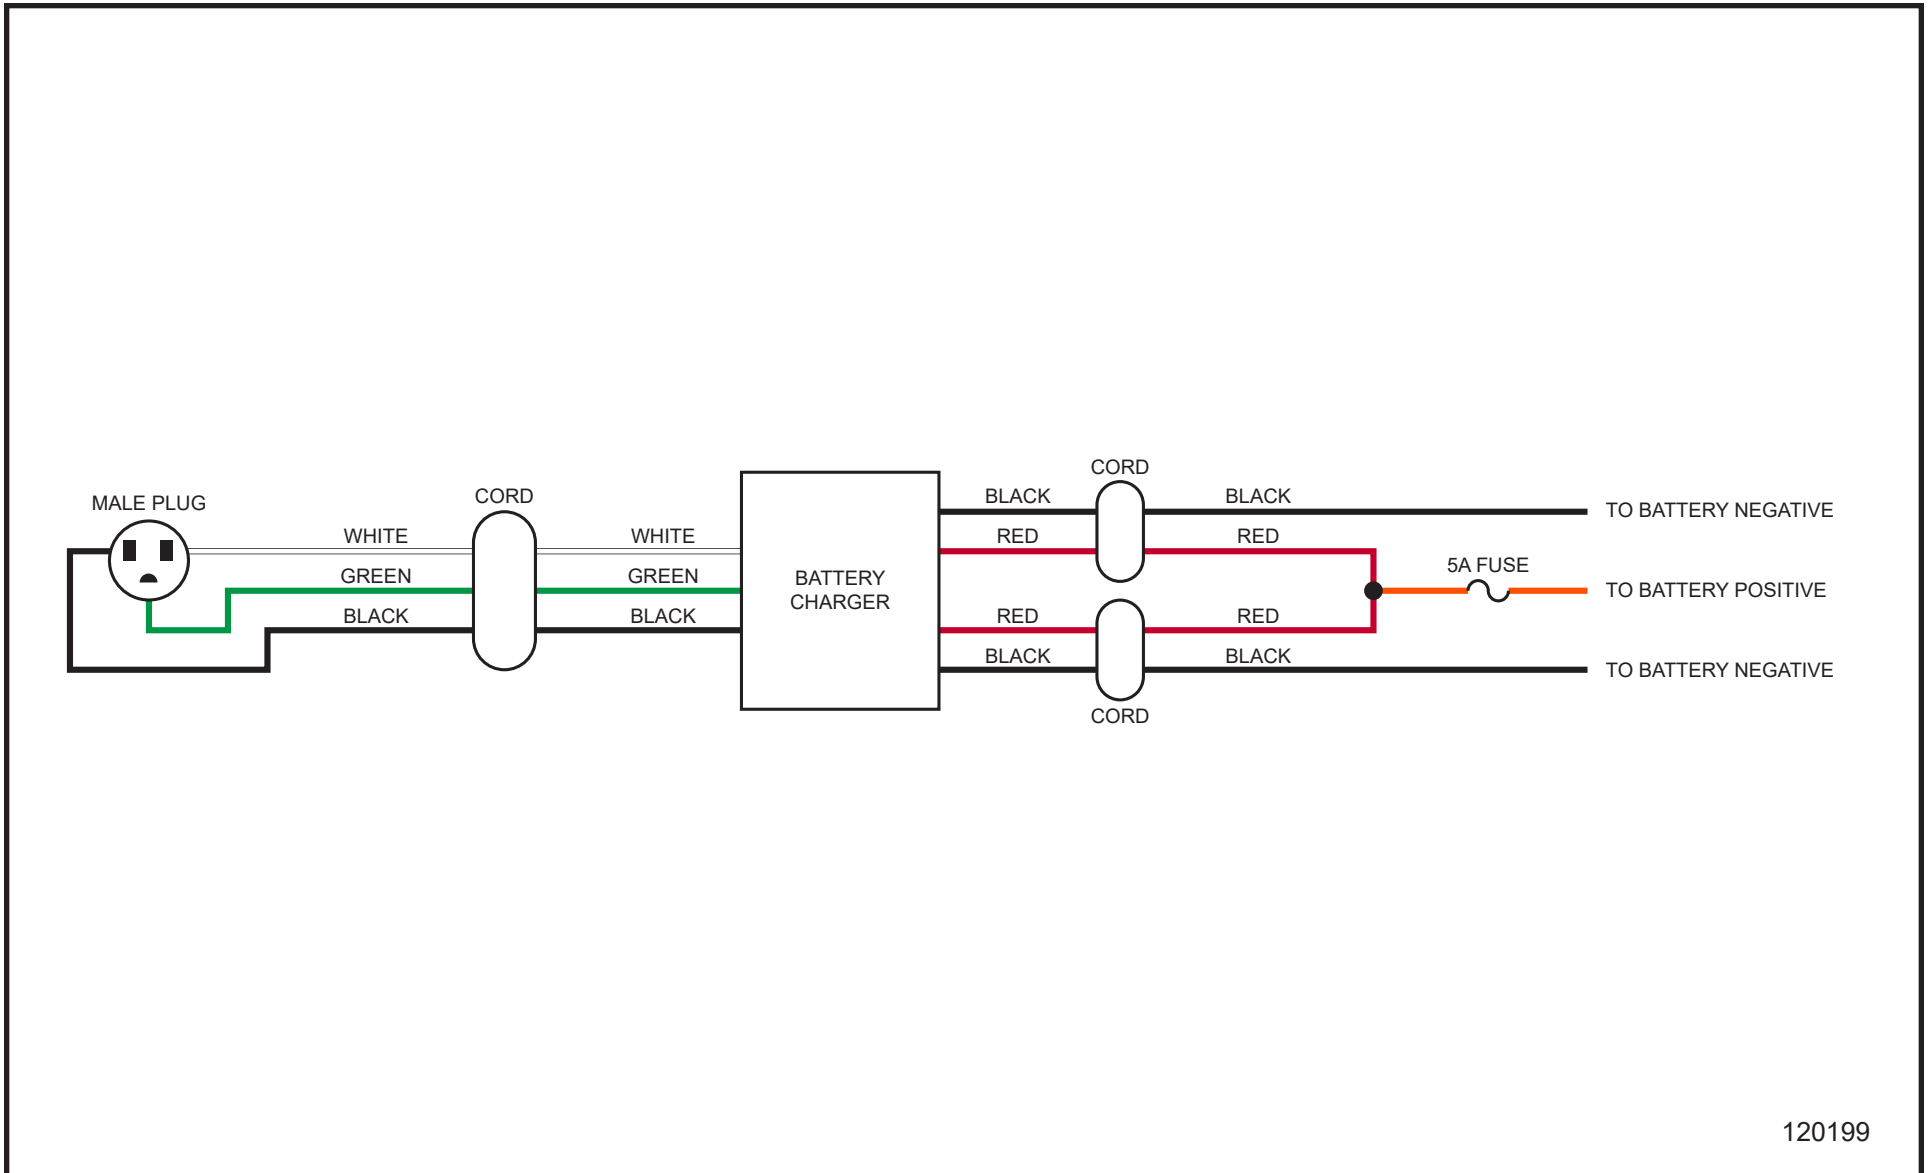


120199

MAXI-POWER™ 15XR

1.8 - 2-GFCI, 2-30A Twistlock, 2-50A Twistlock 15kW Outlet Schematic

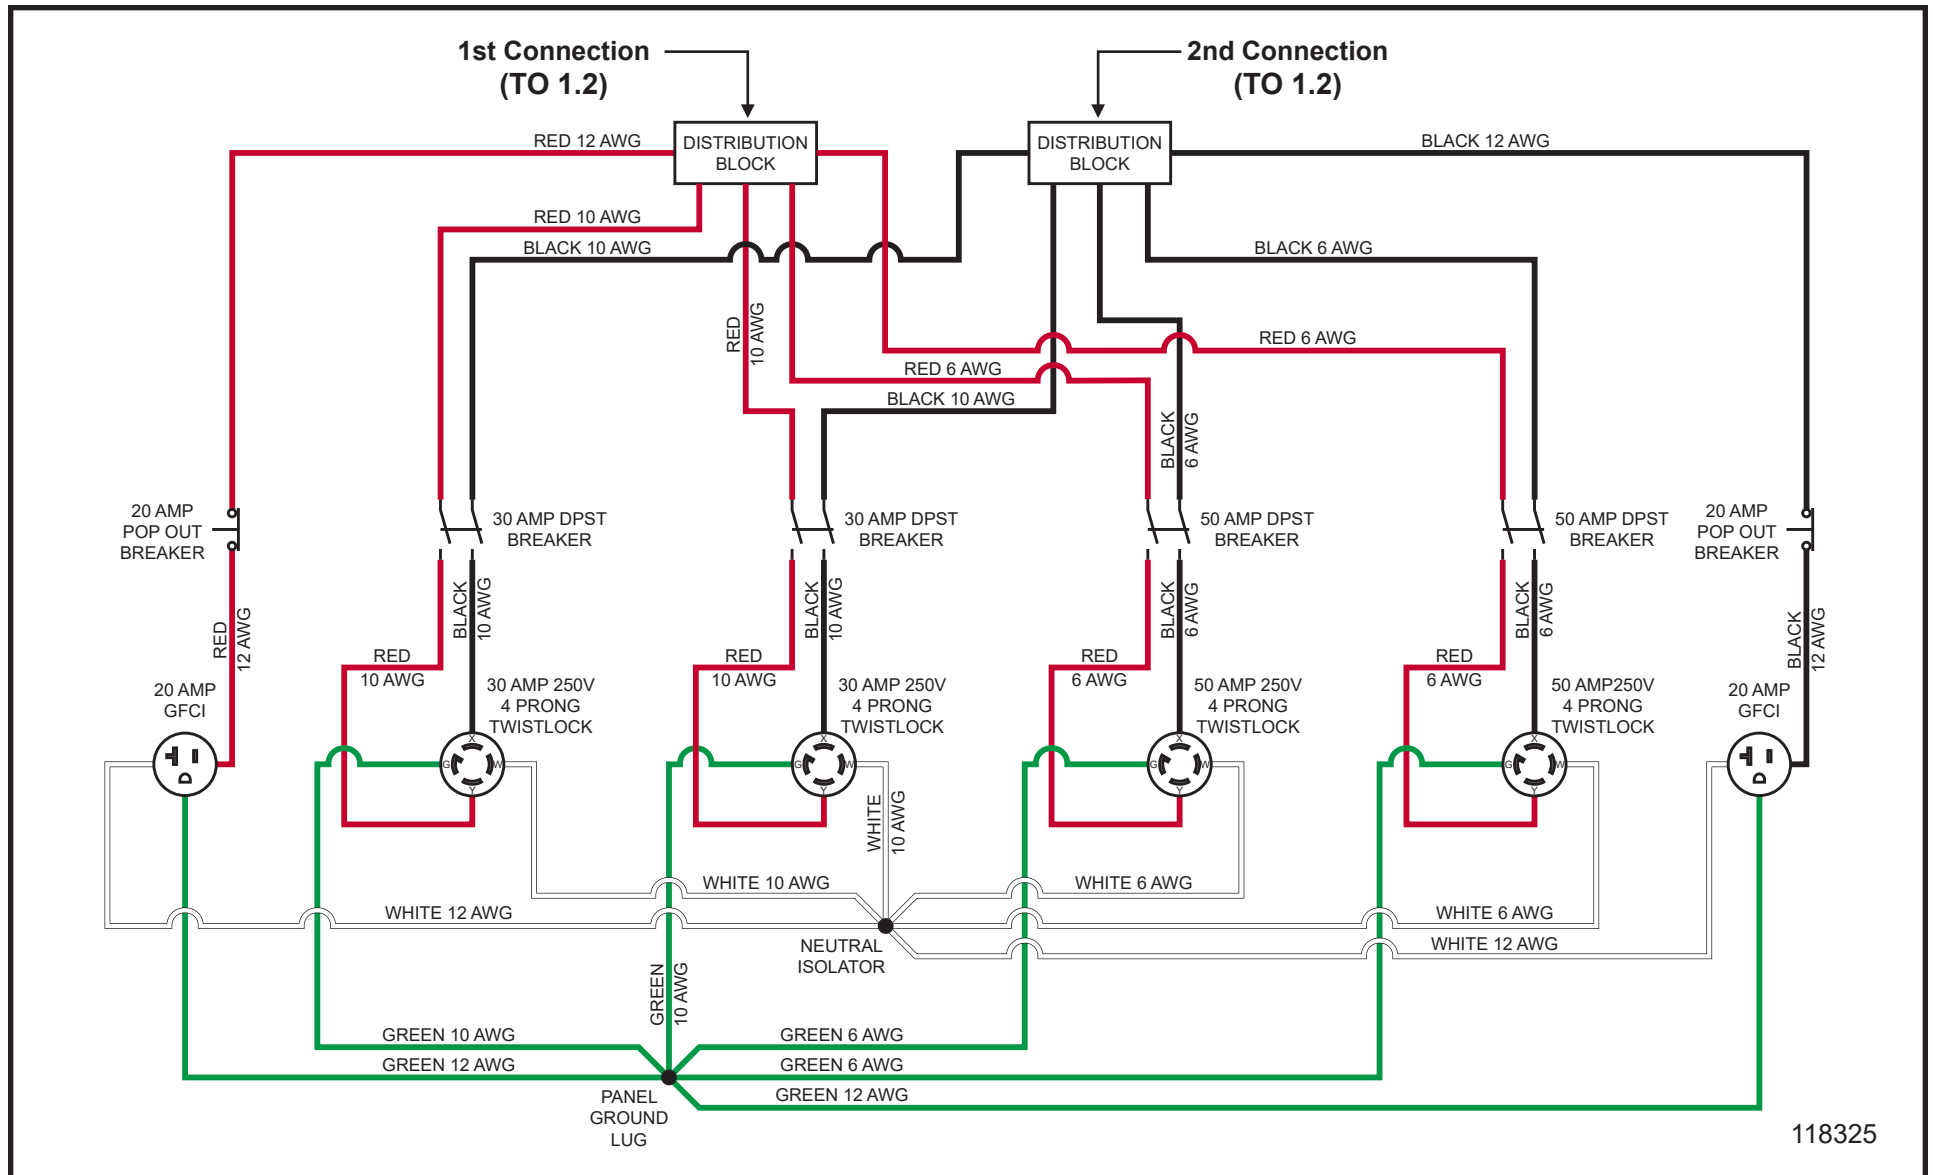


1.9 - 2-GFCI, 2-30A Twistlock, 2-50A RV 15kW Outlet Schematic

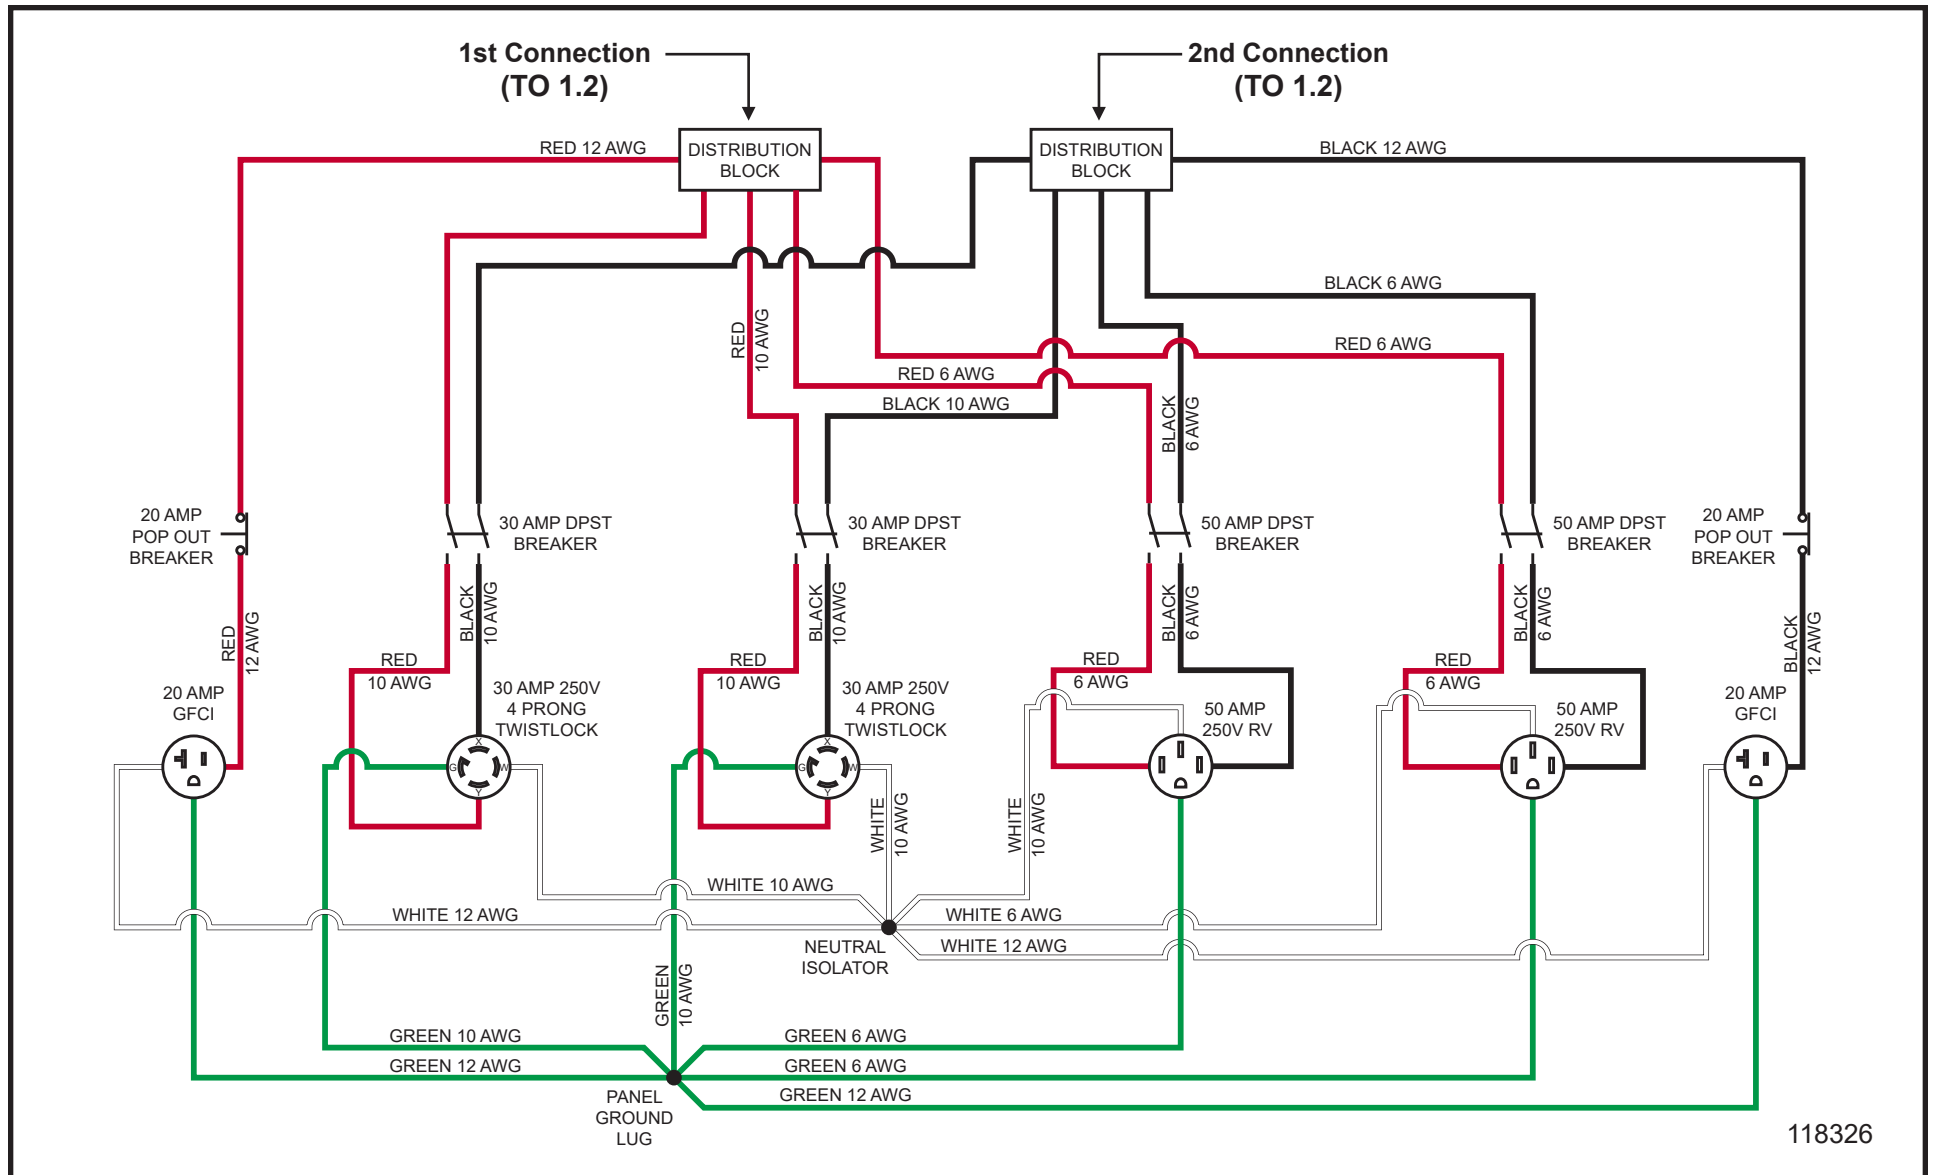


MAXI-POWER™ 15XR

1.10 - 2-GFCI, 2-30A RV, 2-50A RV 15kW Outlet Schematic

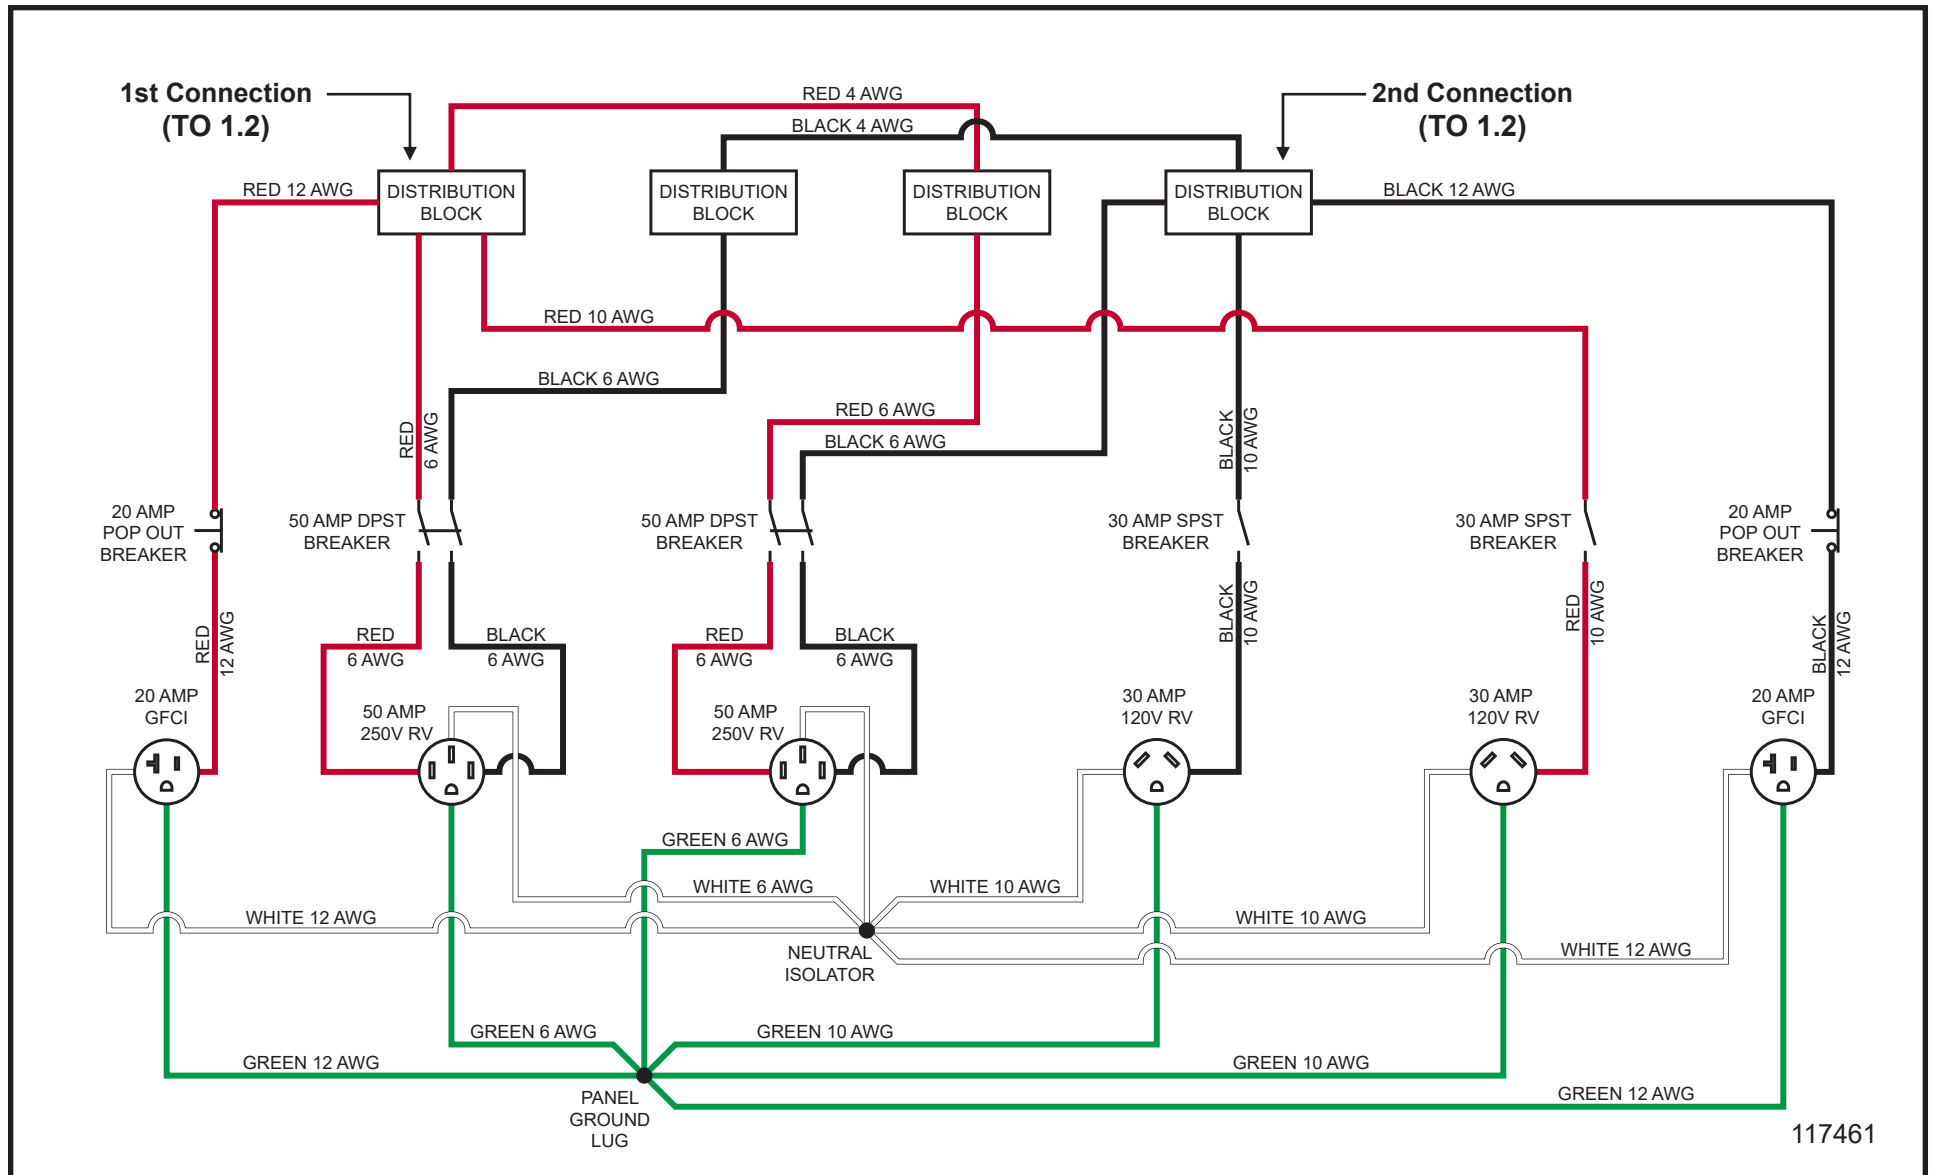


1.11 - Distribution Blocks to Power Lugs 4/4 Cord Schematic

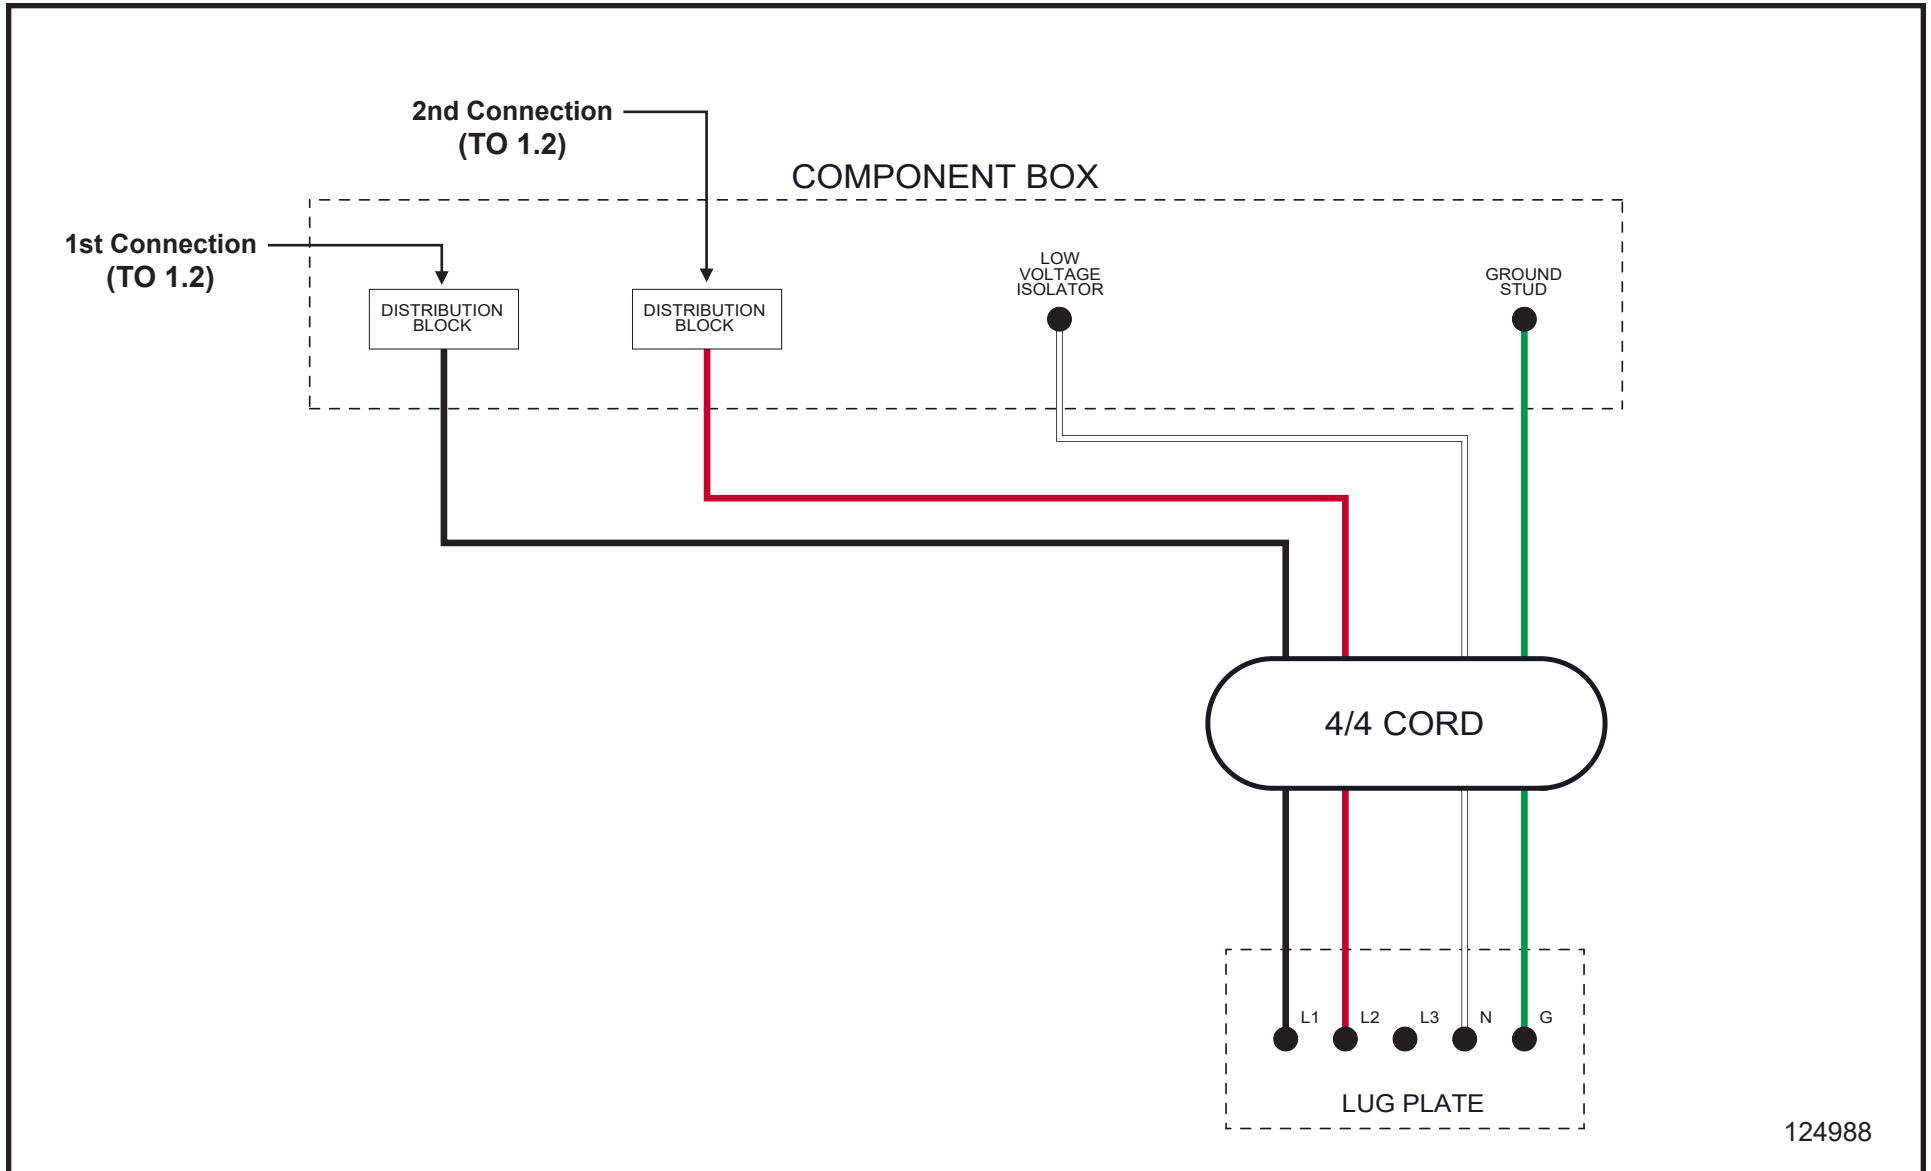


124988

MAXI-POWER™ 15XR

1.12 - 2-GFCI, 2-30A RV, 1-50A RV, 1-50A Twistlock 15kW Outlet Schematic

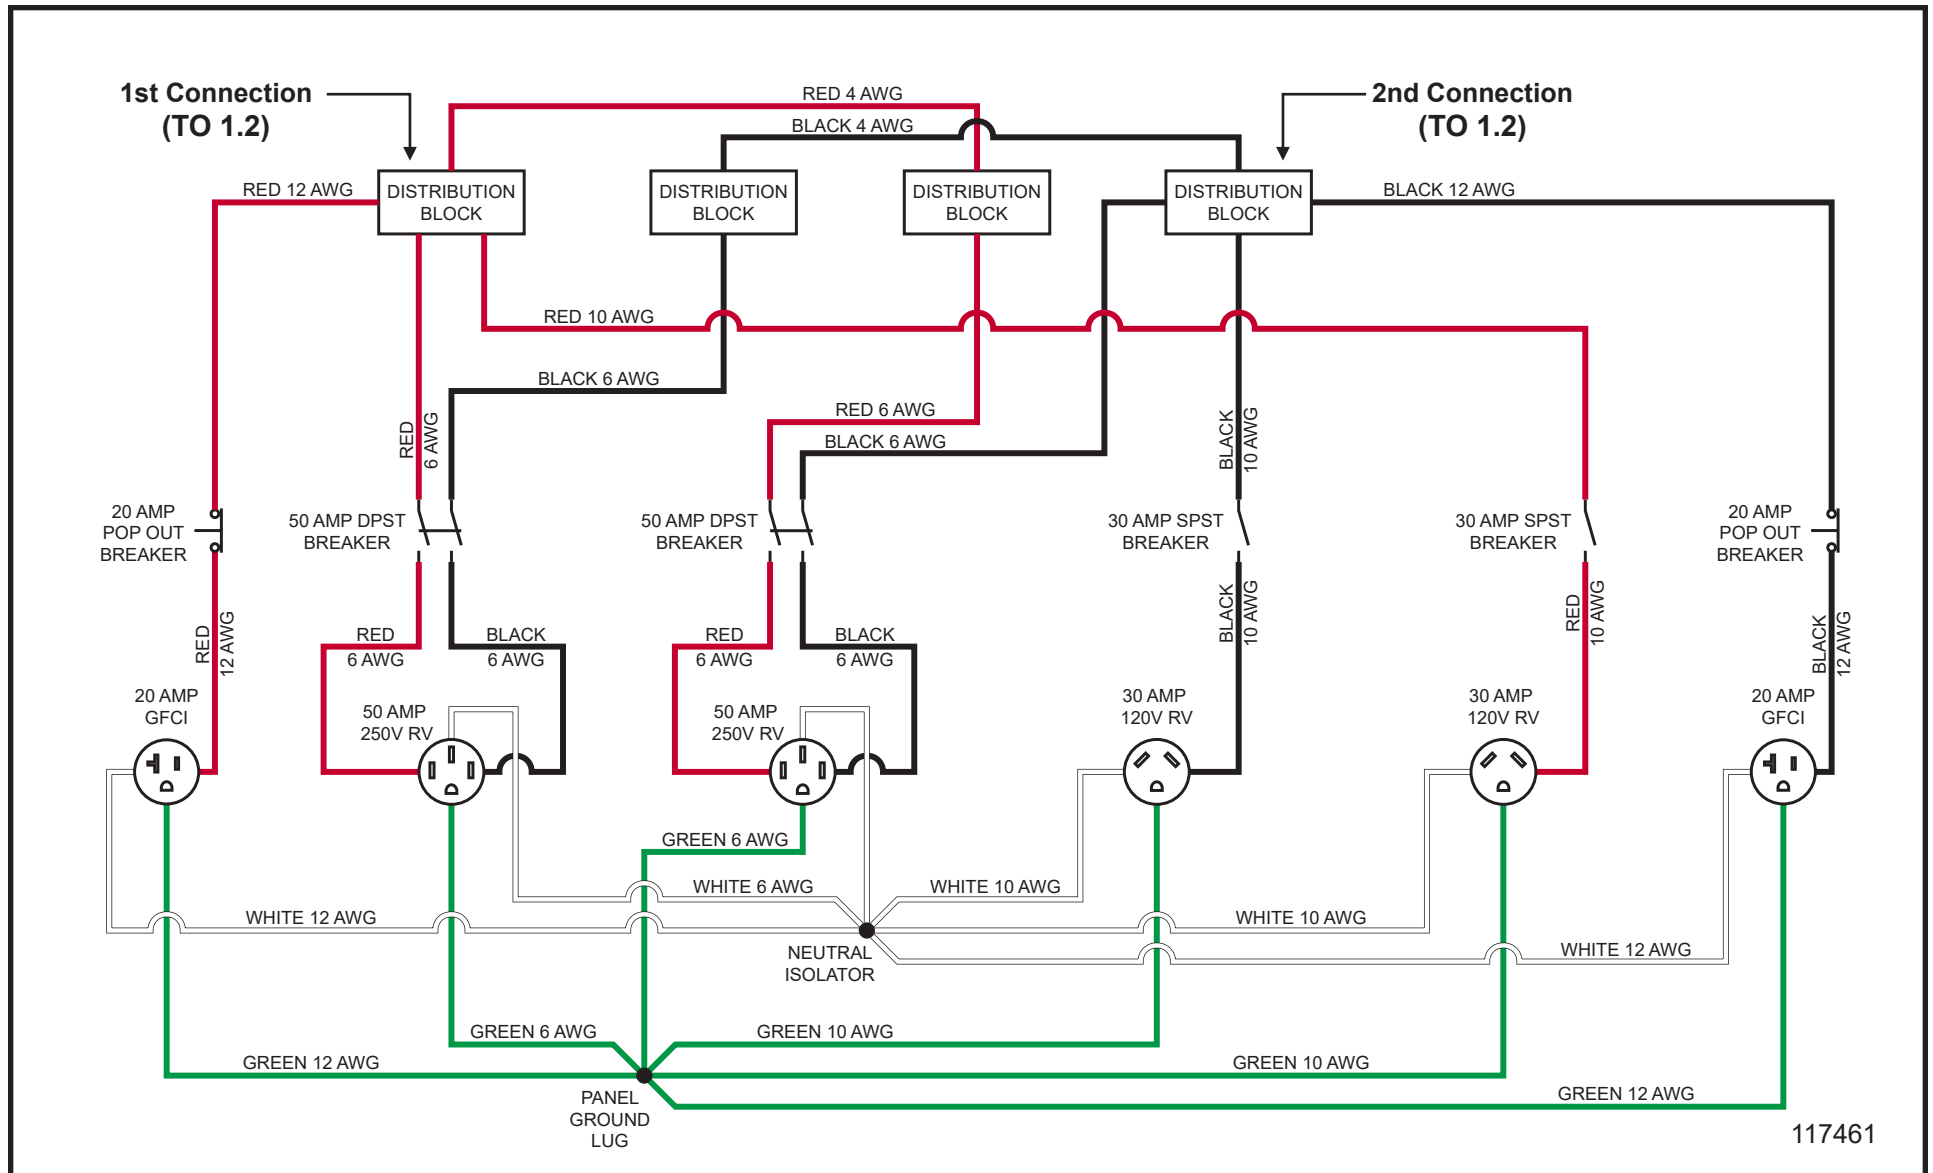


1.13 - Shocker Valve Harness Schematic

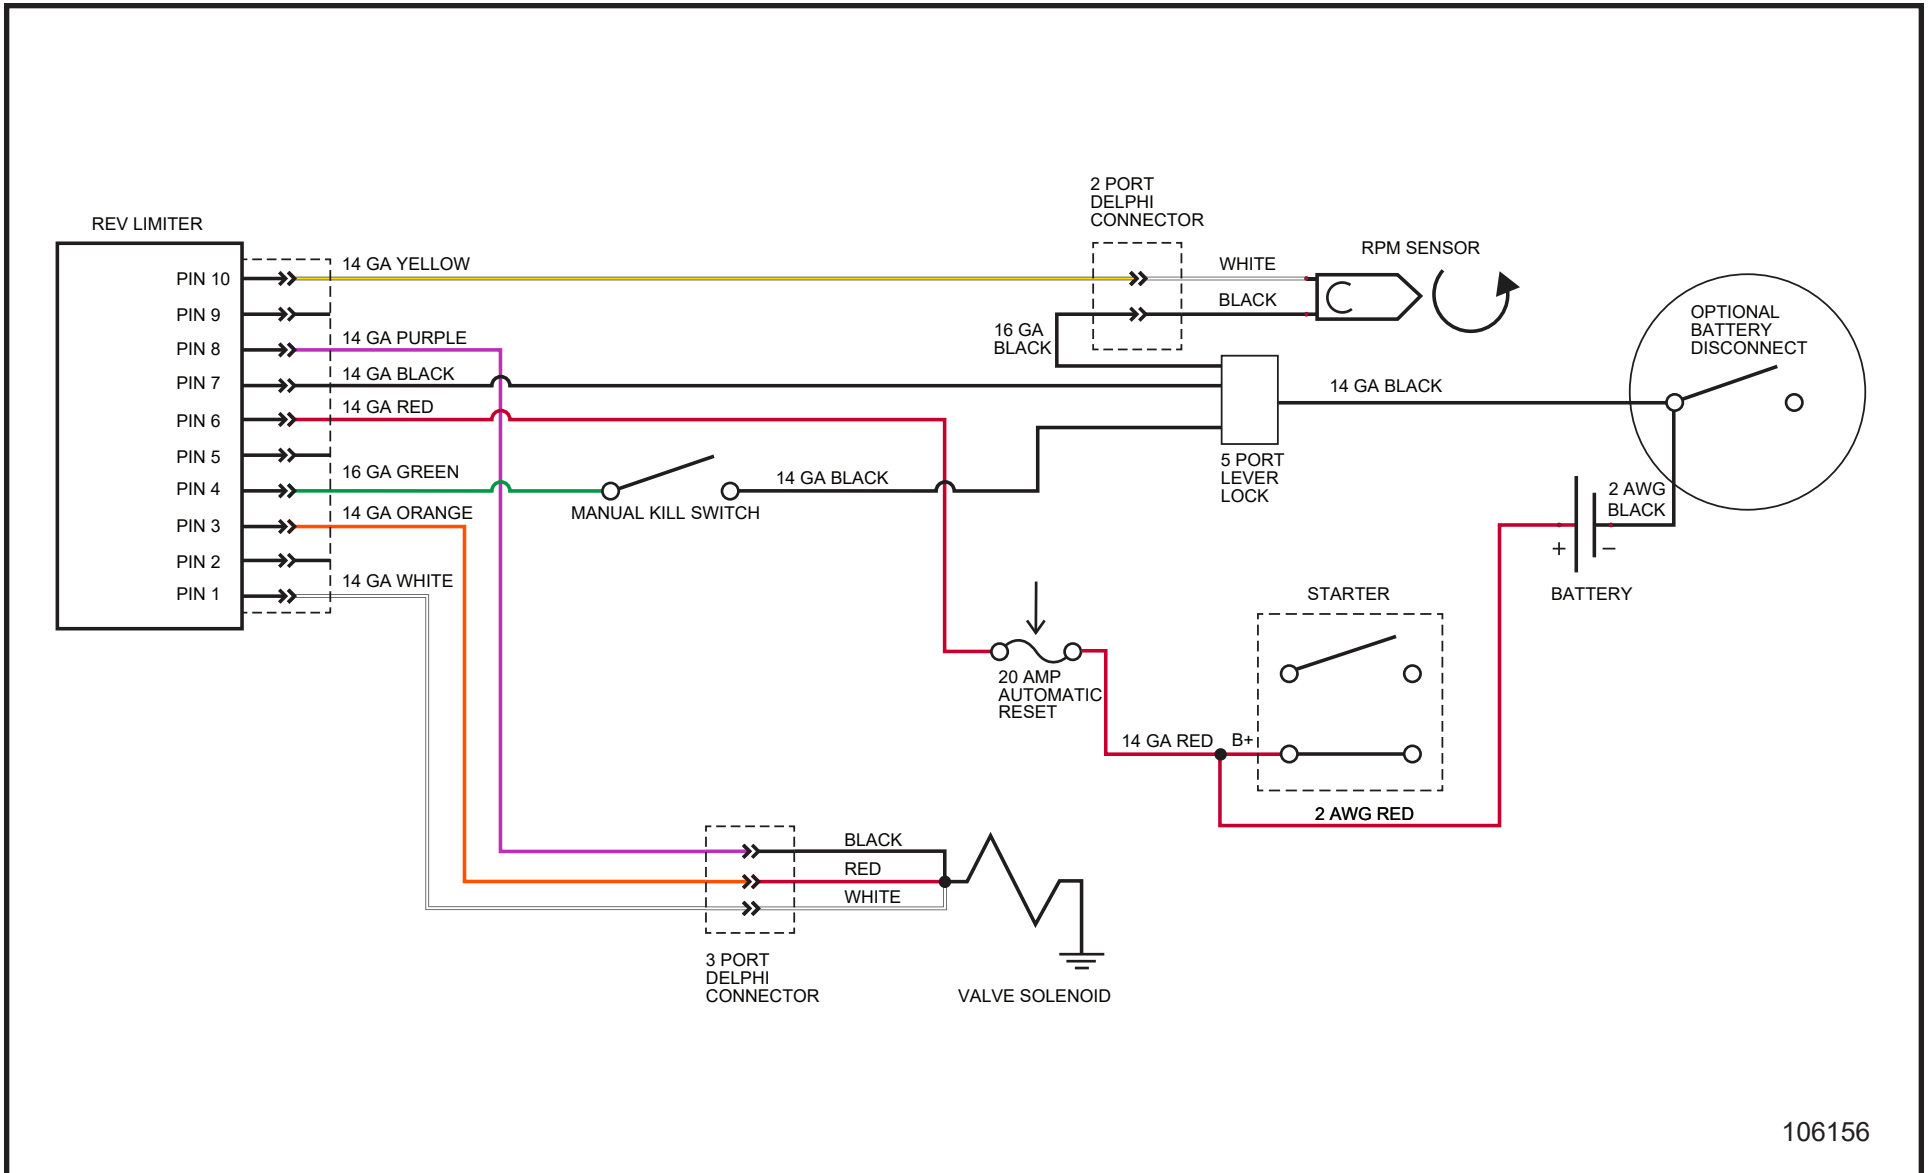

106156

MAXI-POWER™ 15XR

1.14 - Curt Break Away Kit Maxi-Power 15XR Schematic

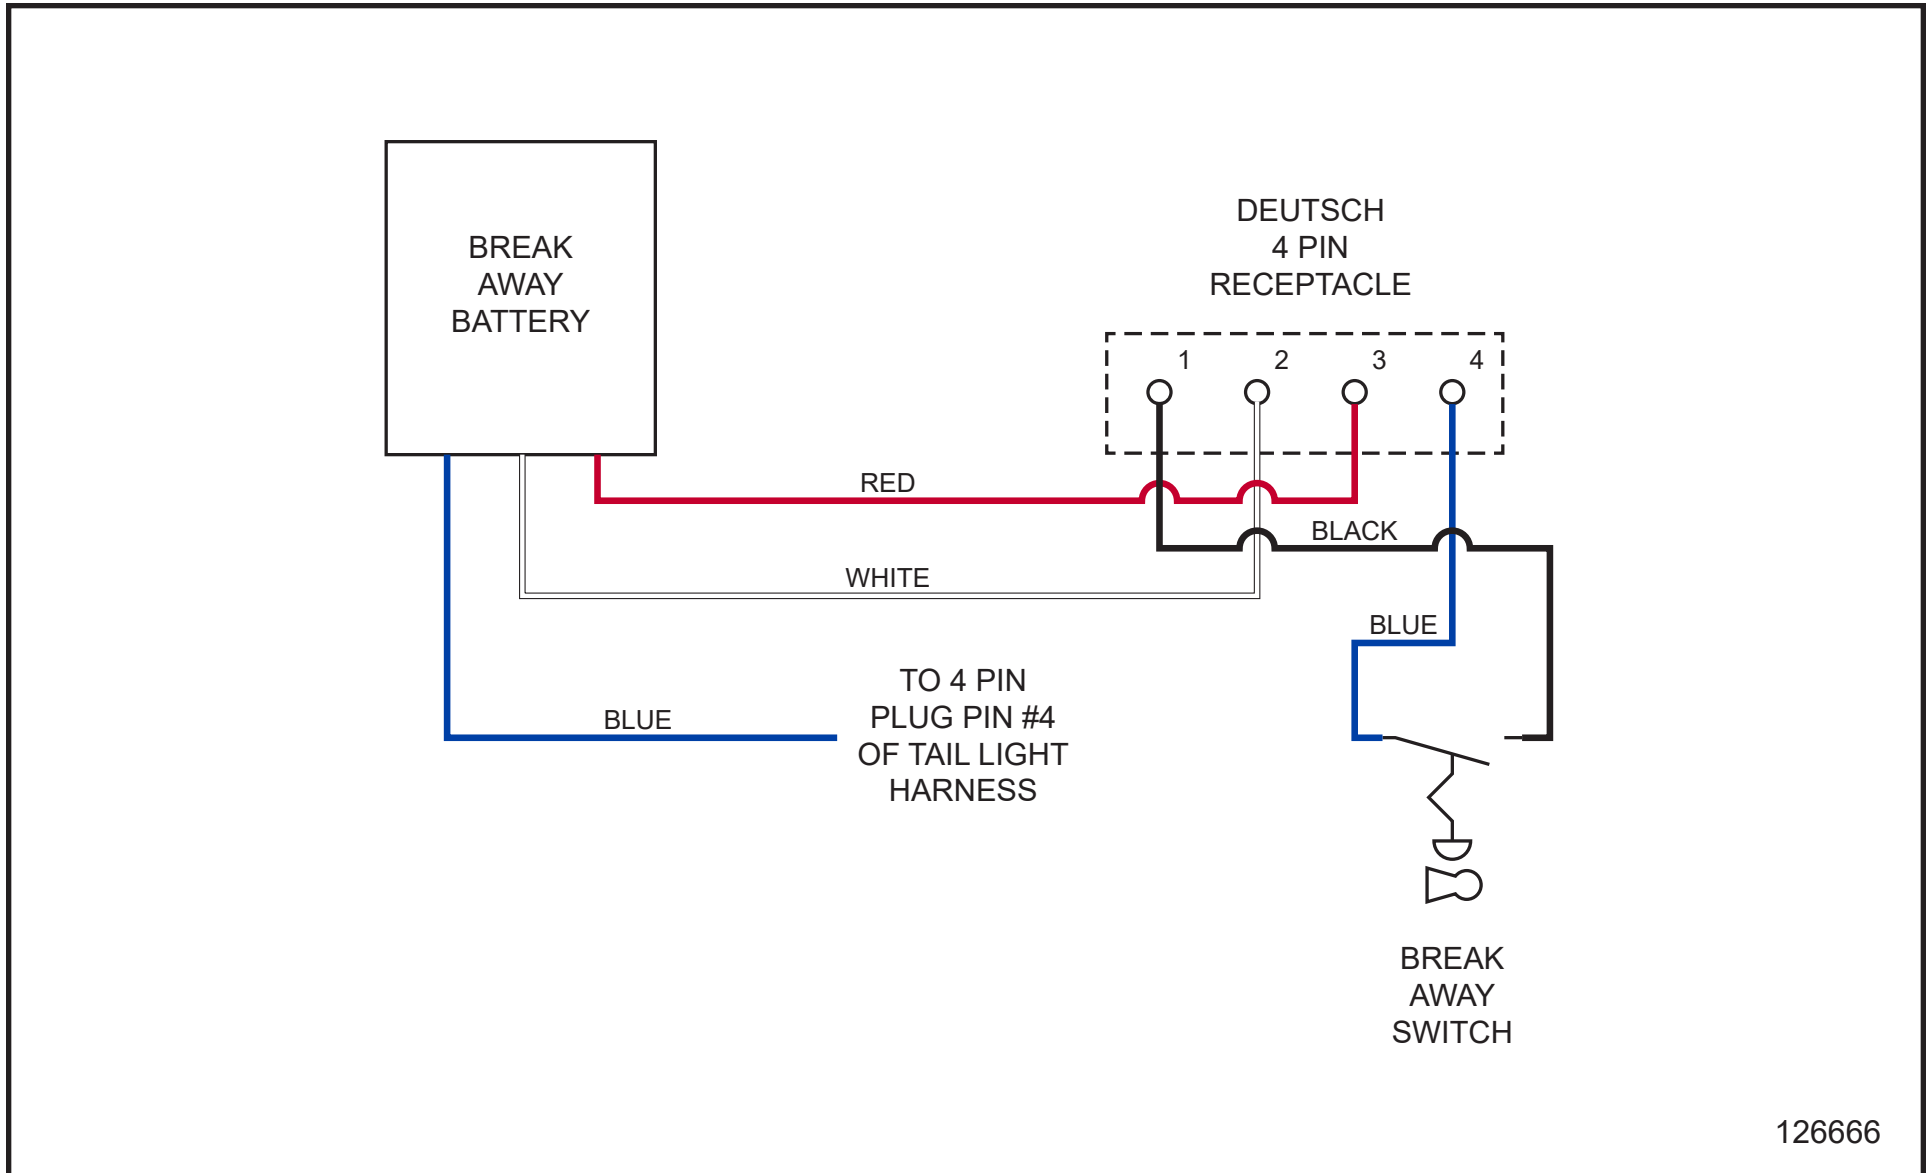

126666

MAXI-POWER™ 15XR



1502 West 4th Avenue
Holdrege, NE 68949

phone: (308) 995-4495 • toll free: (800) 562-1373
fax: (308) 995-5887

www.allmand.com